

STAR PARTS

QUADDER
CATALOG



STAR PARTS, INC.
SOUTH HACKENSACK, N. J.

STAR PARTS

CATALOG
QUADDER



STAR PARTS, INC.
SOUTH HACKENSACK, N. J.

PARTS CATALOG

for

STAR QUADDER MODELS F, G and H

GUARANTEE

All electrical parts of the Selectro-Matic Quadder are guaranteed against defects for a period of ninety days; mechanical parts for one year.

Any part deemed defective should be reported or returned to the factory at South Hackensack for adjustment.


COMMUNICATIONS

When writing to the factory regarding your STAR Quadder, please state the serial number. It will speed a reply also if, in referring to parts, catalog numbers are used for identification wherever possible. As an alternative references to parts shown in photographs or drawings used as illustrations in the Maintenance Manual would also help.




STAR PARTS, Inc.
SOUTH HACKENSACK, N. J.


BRANCH: 1327 BROADWAY, KANSAS CITY, MO. AGENCIES: CHICAGO • MINNEAPOLIS • LOS ANGELES • DENVER
SO. ACTON, MASS. • STAR PARTS (LINECASTING) CANADA LTD. MONTREAL AND AGENTS OVERSEAS

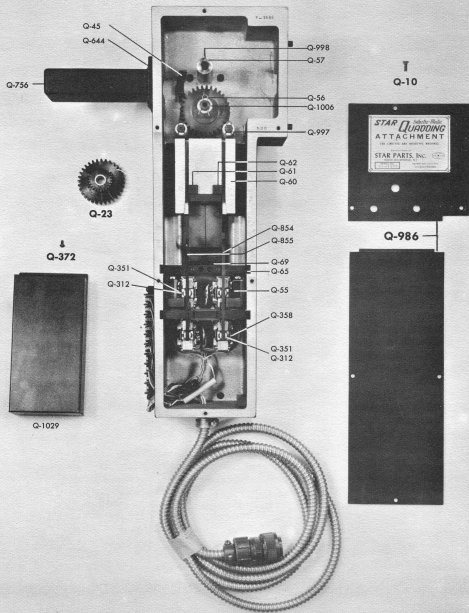


Q-10 Screw, Cover Fastening, (8-32 x 7/16 Oval Hd.)
 Q-23 Gear, Operating, Assembled. (Two Used-One Front & One Rear)
 Q-45 Guide, Left Hand Vise Jaw Horizontal Rack.
 Q-55 Microswitch (V3-715)
 Q-56 Cotter, Operating Gear Retaining Bushing Retaining.
 Q-57 Cotter, Idler Bushing Retaining.
 Q-60 Sliding Unit, Assembled.
 Q-61 Pawl, Left Hand Rack Actuating, Assembled.
 Q-62 Pawl, Right Hand Rack Actuating, Assembled.
 Q-65 Plate, Rack Return, Assembled.
 Q-69 Spring, Rack Return.
 Q-312 Cotter, Solenoid Armature Fastening Pin.
 Q-351 Pin, Solenoid Armature Fastening.
 Q-358 Solenoid.
 Q-372 Screw, Terminal Block Cover. (6-32 x 1/4 Rd. Hd.)
 Q-644 Screw, Vise Jaws Horizontal Rack. (10-32 x 9/16 Rd. Hd.)
 Q-756 Guard, Vise Jaws Horizontal Racks.
 Q-854 Operating Lever, Right Hand, Assembled.
 Q-855 Operating Lever, Left Hand, Assembled.
 Q-986 Cover-Model F.
 Q-997 Bushing, Vertical Rack Idler.
 Q-998 Bushing, Horizontal Rack Idler.
 Q-1006 Bushing, Gear Retaining.
 Q-1029 Cover, Terminal Block.

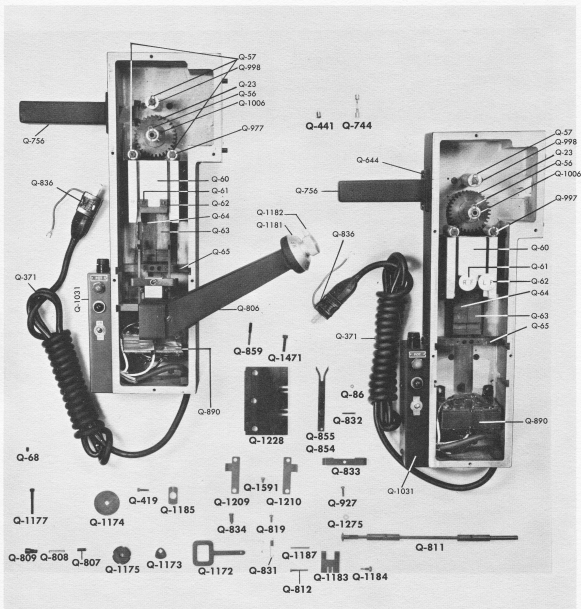

Q-23 Gear, Operating, Assembled.
 Q-56 Cotter, Operating Gear Retaining Bushing Retaining.
 Q-57 Cotter, Idler Bushing Retaining.
 Q-60 Sliding Unit, Assembled.
 Q-61 Pawl, Left Hand Rack Actuating, Assembled.
 Q-62 Pawl, Right Hand Rack Actuating, Assembled.
 Q-63 Rack, Right Hand Vertical, Assembled.
 Q-64 Rack, Left Hand Vertical, Assembled.
 Q-65 Plate, Rack Stop, Assembled.
 Q-68 Set Screw, Dial Selector Fastening. (10-32 x 1/4 AS)
 Q-86 Nut, Operating Lever Adjusting Screw. (4-48 Hex.)
 Q-371 Cord, Power Supply Cable.
 Q-419 Screw, Cam Clamping. (6-32 x 1/2 ACS)
 Q-441 Light Bulb.
 Q-644 Screw, Vise Jaws Horizontal Rack. (10-32 x 9/16 Rd. Hd.)
 Q-744 Fuse-5 Amp.
 Q-756 Guard, Vise Jaws Horizontal Rack.
 Q-806 Selector Unit, Assembled (Model F)
 Q-807 Plunger, Indexing Disk.
 Q-808 Spring, Indexing Disk Plunger.
 Q-809 Screw, Spring Retaining. (Special)
 Q-811 Universal Shaft, Assembled.
 Q-812 Screw, Justification Stop Connecting Link Yoke.
 Q-819 Screw, Relay Socket Fastening. (6-32 x 3/8 Rd. Hd.)
 Q-831 Spring, Justification Stop Connecting Link Operating Yoke.
 Q-832 Screw, Operating Lever Adjusting. (Special)
 Q-833 Spring, Pawl Operating Lever Tension.
 Q-834 Screw, Operating Lever Actuating Lever Lower Fulcrum.
 Q-836 Adaptor
 Q-854 Operating Lever, Right Hand, Assembled.
 Q-855 Operating Lever, Left Hand, Assembled.
 Q-859 Screw, Operating Lever Fulcrum. (Special)
 Q-890 Transformer 110-24 Volt.
 Q-927 Screw, Justification Stop Connecting Link Spring. (6-32 x 1/2 Rd. Hd.)
 Q-997 Bushing, Vertical Rack Idler.
 Q-998 Bushing, Horizontal Rack Idler.
 Q-1006 Bushing, Gear Retaining.
 Q-1031 Box, Master Control.
 Q-1172 Pawl Yoke.
 Q-1173 Yoke Actuating Cam.
 Q-1174 Cam Spacer.
 Q-1175 Indexing Disk
 Q-1177 Screw, Selector Bracket & Pawl Housing Fastening. (8-32 x 1 ACS)
 Q-1181 Dial Selector.
 Q-1182 Knob, Dial Indicating.
 Q-1183 Yoke, Justification Stop Connecting Link.
 Q-1184 Screw, Yoke Pivoting. (Special)
 Q-1185 Yoke Operating Cam.
 Q-1187 Pin, Justification Stop Connecting Link Yoke.
 Q-1209 Lever, Pawl Operating Lever Actuating, Left Hand.
 Q-1210 Lever, Pawl Operating Lever Actuating, Right Hand.
 Q-1228 Plate, Selector Bracket Mounting.
 Q-1275 Washer, Pawl Operating Lever Tension Spring.
 Q-1471 Screw, Pawl Housing & Plate Fastening. (10-32 x 3/4 ACS)
 Q-1591 Screw, Pawl Operating Lever Actuating Lever Holding.

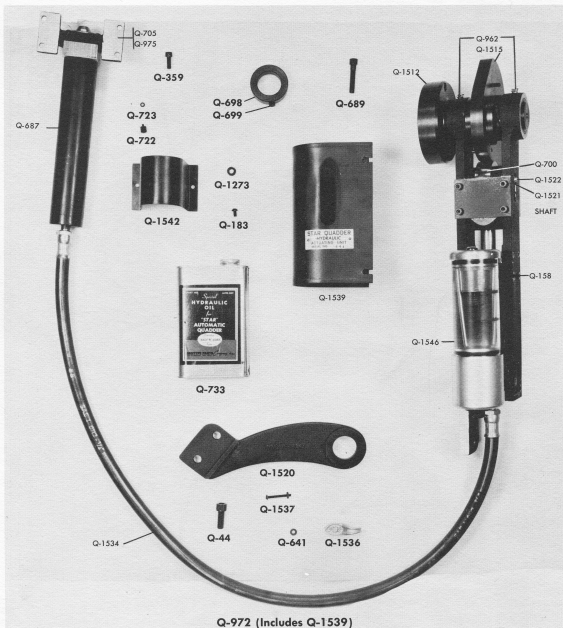

- Q-44 Screw, Housing Fastening.
- Q-158 Nut, Hydraulic Unit Cover Screw. (10-32 Hex.)
- Q-183 Screw, Slave Cylinder Bleeding Screw Guard.
- Q-359 Screw, Slave Cylinder Holding Bracket. (1/4-20 x 3/4 ACS)
- Q-641 Washer, Hydraulic Hose Bracket Screw.
- Q-687 Hydraulic Slave Cylinder, Assembled.
- Q-689 Screw, Hydraulic Cam Shaft. (5/16-18 x 1-1/2" ACS)
- Q-692 Cup, Master Cylinder Bracket Oil.
- Q-698 Collar, Hydraulic Master Cylinder Bracket Support.
- Q-699 Screw, Hydraulic Master Cylinder Bracket Support Collar. (3/8-16 x 5/8" AS)
- Q-700 Follower, Cam
- Q-705 Bracket, Slave Cylinder Holding.
- Q-722 Screw, Hydraulic Cylinder Bleeding.
- Q-723 "O" Ring, Hydraulic Cylinder Bleeding Screw.
- Q-733 Hydraulic Oil.
- Q-972 Hydraulic Unit, Assembled. (Includes Q-1539)
- Q-975 Bracket, Slave Cylinder Holding.
- Q-1273 Washer, Slave Cylinder Bleeding Screw Guard Screw.
- Q-1512 Shaft, Hydraulic Cam.
- Q-1515 Cam, Hydraulic Actuating.
- Q-1520 Support, Hydraulic Master Cylinder Bracket.
- Q-1521 Shaft, Cam Follower.
- Q-1522 Grease Fitting, Cam Follower Shaft.
- Q-1534 Hose, Hydraulic.
- Q-1536 Bracket, Hydraulic Hose Holding.
- Q-1537 Screw and Nut, Hydraulic Hose Bracket.
- Q-1539 Cover, Hydraulic Valve & Reservoir.
- Q-1542 Guard, Slave Cylinder Bleeding Screw.
- Q-1546 Valve & Reservoir Assembled.

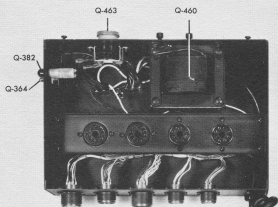

Q-889


Q-371



Q-836



Q-1294



Q-899



Q-474



Q-735



Q-891


Q-364 Switch, On-Off Toggle.
Q-371 Wire, Main Power and Plug, Assembled.
Q-382 Light, On-Off Signal.
Q-460 Transformer, Master Control Box. (110V-24V)
Q-463 Fuse, Master Control Box. 3.2 Amps.
Q-474 Relay-Eight Terminal (Interchangeable)
Q-735 Relay-Teletypesetter.
Q-836 Adaptor.
Q-889 Master Control Box, Assembled.
Q-891 Dummy Plug.
Q-899 Cable, Teletype, Assembled.
Q-1294 Cover, Master Control Box, Assembled.




Q-1320




Q-578
Q-579



Q-576
Q-577

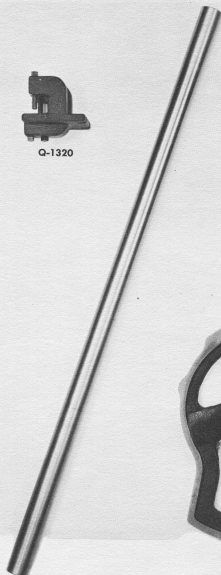


Q-695
Q-696
Q-697

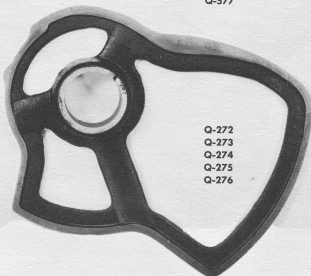

Q-272
Q-273
Q-274
Q-275
Q-276


Q-272 First Elevator Cam, Linotype.
 Q-273 First Elevator Cam, Late Linotype.
 Q-274 First Elevator Cam, Comet.
 Q-275 First Elevator Cam, Intertype
 Q-276 First Elevator Cam, High Speed Intertype.
 Q-576 Delivery Channel Plate Assembled, Early Linotype.
 Q-577 Delivery Channel Plate Assembled, Late Linotype.
 Q-578 Delivery Channel Plate Assembled, Early Intertype.
 Q-579 Delivery Channel Plate Assembled, Late Intertype.
 Q-695 Master Cylinder Bracket Support Shaft For Underslung.
 Q-696 Master Cylinder Bracket Support Shaft for Overhead Motor.
 Q-697 Master Cylinder Bracket Support Shaft for Reid Drive or Comet.
 Q-1320 Bracket, Master Control Box Holding.

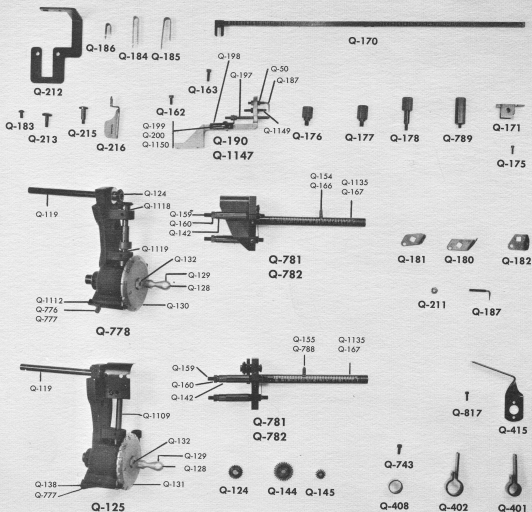


- Q-50 Nut, Short Line Operating Mechanism Pointer Lock.
- Q-119 Tube, Positioning Screw Driving.
- Q-124 Gear, Positioning Screw Bevel, Assembled.
- Q-125 Dial Bracket, Assembled.
- Q-128 Screw, Dial Handle.
- Q-129 Dial Handle.
- Q-130 Dial (for use With Mohr Saw)
- Q-131 Dial.
- Q-132 Dial Nut.
- Q-138 Indicator Dial.
- Q-142 Stud, Gear Plate Adjusting.
- Q-144 Gear Bevel, Assembled.
- Q-145 Pinion, Assembler Rod Positioning Screw.
- Q-154 Nut, Positioning Screw. (1/4-24 Special)
(For Machines with Mohr Saw)
- Q-155 Nut, Positioning Screw. (For Machines Without Mohr Saw)
- Q-159 Stud, Gear Plate Fastening.
- Q-160 Nut, Gear Plate Fastening Stud. (1/4-24 Special)
- Q-162 Screw, Stud fastening. (8-32 x 3/8" ACS)
- Q-163 Screw, Stud Fastening. (8-32 x 1/2 ACS)
- Q-166 Nut, Positioning Screw, with Pointer. (Special Machines)
- Q-167 Tube, Positioning Screw Nut Guide, Assembled with Scale.
- Q-170 Assembler Rod, Assembled.
- Q-171 Assembler Rod, Assembled.
- Q-175 Screw, Assembler Stop Attaching. (4-48 x 11/32 Fil. Hd.)
- Q-176 Stud, Assembler Rod Support. (Type A) Linotype.
- Q-177 Stud, Assembler Rod Support. (Type B) Linotype.
- Q-178 Stud, Assembler Rod Support. (Type A) Intertype.
- Q-180 Support, Assembler Rod. Linotype.
- Q-181 Support, Assembler Rod. Linotype (Used with Swinging Keyboard)
- Q-182 Support, Assembler Rod. Linotype.
- Q-183 Screw, Assembler Rod Support. (10-32 x 5/16 Rd. Hd.)
- Q-184 Spring, Assembler Rod Tension, Linotype.
- Q-185 Spring, Assembler Rod Tension, Late Style Linotype.
- Q-186 Spring, Assembler Rod Tension, Intertype.
- Q-187 Pointer, Line Adjustment.
- Q-190 Assembler Slide Indicating Arm Assembled.
- Q-197 Trip, Assembler Slide Microswitch.
- Q-198 Adjustor, Short Line.
- Q-199 Plunger, Short Line Adjustor Locking.
- Q-200 Screw, Short Line Adjustor Locking.
- Q-211 Nut, Assembler Slide Finger Adjusting Screw.
- Q-212 Support, Assembler Rod and Slide. Intertype.
- Q-213 Screw, Assembler Slide Roll, Intertype.
- Q-215 Lever, Assembler Slide Bar Releasing, Intertype.
- Q-216 Screw, Assembler Slide Bar Releasing Lever, Intertype.
- Q-401 Lever, Actuating Plunger Operating. (9/16" Dia.)
- Q-402 Lever, Actuating Plunger Operating. (3/4" Dia.)
- Q-408 Reducer Bushing, Actuating Plunger Operating Lever.
- Q-415 Lever, Actuating Plunger Operating, Teletype-setter.
- Q-743 Screw, Actuating Plunger Operating Lever. (8-32 x 5/16" ACS)
- Q-776 Screw, Dial Indicator. (Special)
- Q-777 Plunger Spring.
- Q-778 Dial Bracket, Assembled - (Mohr Saw).
- Q-781 Gear Plate, Assembled. (Mohr Saw)
- Q-782 Gear Plate.
- Q-788 Nut, Positioning Screw, With Pointer. (For Machines without Mohr Saw)
- Q-789 Stud, Assembler Rod Support. (Type A)
- Q-817 Screw, Actuating Plunger Operating Lever. (6-32 x 3/8)
- Q-1109 Pinion Shaft, Dial Bracket, Assembled.
- Q-1112 Indicator Dial
- Q-1118 Dial Bracket Shaft and Gear, Assembled. (Mohr Saw)
- Q-1119 Dial Bracket Pinion and Shaft, Assembled. (Mohr Saw)
- Q-1135 Tube, Positioning Screw Nut Guide.
- Q-1147 Arm, Assembler Slide Indicating, Assembled.
- Q-1149 Screw, Stop.
- Q-1150 Spring, Short Line Adjustor Locking Screw Pressure.

Q-55 Microswitch (V3-715)
 Q-147 Screw, Actuating Switch Housing Cover. (4-48 x 3/16" Rd. Hd.)
 Q-364 Switch, On-Off Toggle.
 Q-372 Screw, Memory Transfer Cover. (6-32 x 1/4 Rd. Hd.)
 Q-400 Plunger, Memory Transfer Actuating.
 Q-403 Actuator. (JV-30)
 Q-407 Actuator, Microswitch.
 Q-434 Switch, Push Button.
 Q-439 Dome, Pot Pump Light, Green.
 Q-444 Dome, Cast Light, Red.
 Q-451 Switch, Selector Box, Teletypesetter and Manual.
 Q-740 Solenoid Bracket Pump Stop, Assembled.
 Q-796 Spring, Solenoid Bracket Actuating Arm.
 Q-799 Actuating Arm, Solenoid Bracket.
 Q-800 Screw, Solenoid Bracket Actuating Arm Fastening.
 Q-802 Screw, Solenoid Bracket Pump Stop Cover. (8-32 Special)
 Q-862 Solenoid, Actuating Mechanism, Assembled.
 Q-866 Microswitch Actuating Lever and Bearing, Assembled, Left Hand.
 Q-867 Microswitch Actuating Lever and Bearing, Assembled Right Hand.
 Q-871 Memory Transfer, Assembled.
 Q-874 Cover, Memory Transfer.
 Q-875 Screw, Memory Transfer Cover. (10-32 x 1 ACS)
 Q-876 Plunger, Memory Transfer Unit.
 Q-877 C Washer, Memory Transfer Plunger.
 Q-878 Washer, Memory Transfer Plunger.
 Q-879 Spring, Memory Transfer Slide Stop.
 Q-882 Short Line Switch, Assembled.
 Q-883 Selector Box, Assembled.
 Q-896 Cable, Solenoid Bracket Pump Stop, Assembled.
 Q-1169 Cover, Solenoid Bracket Pump Stop.
 Q-1251 Cover, Actuating Switch Housing.
 Q-1261 Bearing, Memory Transfer Plunger.
 Q-1565 Cable, Assembled for Solenoid Actuating Unit.
 Q-1566 Cable, Assembled for Memory Transfer Unit.
 Q-1567 Cable, Assembled for Selector Box.
 Q-1570 Pot Pump Solenoid, Assembled.


Q-441 Light Bulb (not illustrated) (Installation note:
 The domes, Q-439 and Q-444 can be screwed
 out to replace bulbs.)

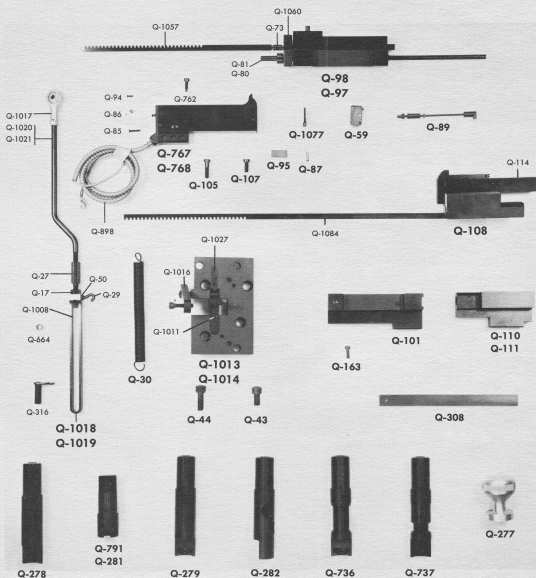


- Q-17 Nut, Relief Cam Adjusting Screw.
- Q-27 Screw, Relief Cam Adjusting. (5/16-18 Special)
- Q-29 Hook, Relief Cam Yoke.
- Q-30 Spring, Relief Cam Actuating Arm.
- Q-43 Screw, Fastening Plate. (3/8-16 x 5/8" ACS)
- Q-44 Screw, Housing Fastening. (3/8-16 x 1" ACS)
- Q-50 Nut, Relief Cam Yoke Spring Hook Lock. (8-32)
- Q-59 Vise Jaw Microswitch.
- Q-73 Screw, Left Hand Vise Jaw Adjusting.
- Q-80 Screw, Positioning, Assembled. (For use with Mohr Saw)
- Q-81 Screw, Positioning, Assembled.
- Q-85 Screw, Microswitch Adjusting. (4-48 x 9/16 Rd. Hd.)
- Q-86 Nut, Microswitch Adjusting Screw. (4-48 Hex.)
- Q-87 Screw, Microswitch and Operating Lever, Fulcrum.
- Q-89 Rod, Switch Operating, Assembled.
- Q-94 Screw, Vise Jaw Cable Fitting. (3-56 x 9/32" Fil. Hd.)
- Q-95 Insulation, Vise Jaw Microswitch.
- Q-97 Block, Left Hand Vise Jaw, Assembled. (For use with Mohr Saw)
- Q-98 Block, Left Hand Vise Jaw, Assembled.
- Q-101 Block, Left Hand Vise Jaw.
- Q-105 Screw, Left Hand Vise Jaw Holding. (1/4-24 x 7/8" Fil. Hd.)
- Q-107 Screw, Right Hand Vise Jaw Holding. (1/4-24 x 9/16" Fil. Hd.)
- Q-108 Right Hand Vise Jaw Assembled.
- Q-110 Block, Right Hand Vise Jaw.
- Q-111 Block, Right Hand Vise Jaw, Late Linotype.
- Q-114 Right Hand Vise Jaw.
- Q-163 Screw, Vise Jaw Block Holding. (8-32 x 1/2 ACS)
- Q-277 Extension Handle.
- Q-278 Stud, Right Hand Vise Locking, Linotype.
- Q-279 Stud, Right Hand Vise Locking, Intertype.
- Q-281 Stud, Left Hand Vise Locking, Intertype.
- Q-282 Stud, Right Hand Vise Locking, Air Cooled, Intertype.
- Q-308 Rail, Left Hand Vise Jaw Block Supporting.
- Q-316 Pin, Justification Bar Hinge, Intertype.
- Q-664 Bushing, Holding Screw.
- Q-736 Stud, Right Hand Vise Locking, Air Cooled, Late Intertype.
- Q-737 Stud, Right Hand Vise Locking, Air Cooled, Late Late Intertype.
- Q-762 Screw, Microswitch Operating Rod Stop, Special.
- Q-767 Left Hand Vise Jaw Assembled. (Intertype)
- Q-768 Left Hand Vise Jaw Assembled. (Linotype)
- Q-791 Stud, Left Hand Vise Locking.
- Q-898 Cable, Vise Jaw, Assembled.
- Q-1008 Yoke, Relief Cam.
- Q-1011 Bracket, Assembled with Positioning Screw.
- Q-1013 Fastening Plate, Assembled.
- Q-1014 Fastening Plate, Assembled.
- Q-1016 Relief Cam Assembled.
- Q-1017 Swivel Joint.
- Q-1018 Actuating Arm & Swivel Joint, Assembled.
- Q-1019 Actuating Arm & Swivel Joint, Assembled. (For use with Automatic Ejector)
- Q-1020 Rod, Relief Cam Actuating Arm.
- Q-1021 Rod, Relief Cam Actuating Arm. (For Linotype Machines Only with Automatic Ejectors)
- Q-1027 Stop, Positioning Screw Bracket.
- Q-1057 Horizontal Rack, Left Hand Vise Jaw.
- Q-1060 Guide and Brace, Assembled.
- Q-1077 Lever Switch, Operating, Assembled.
- Q-1084 Horizontal Rack, Right Hand Vise Jaw.

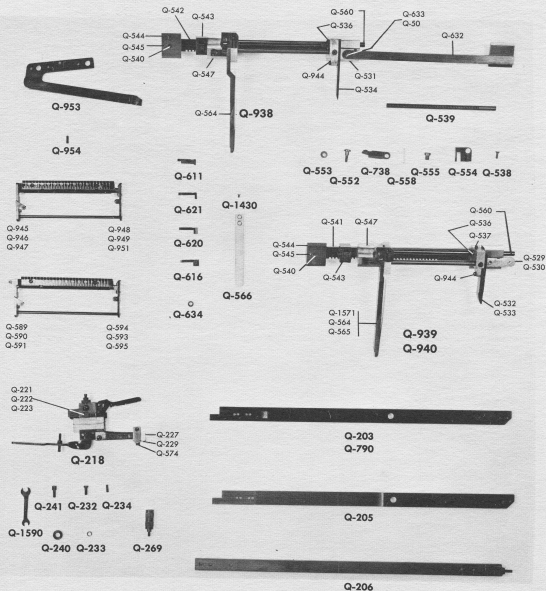

- Q-50 Nut, Assembling Elevator Bar Screw.
- Q-203 Assembly, Slide, Comet.
- Q-205 Assembler Slide Bar, Offset.
- Q-206 Assembler Slide Assembled, Intertype.
- Q-218 Assembler Slide Brake, Assembled.
- Q-221 Roller, Brake.
- Q-222 Stud, Brake Roller Returning.
- Q-223 Spring, Brake Roller Retaining.
- Q-227 Screw, Assembling Rod Support Right Hand Fastening.
- Q-229 Slide, Brake Roller Releasing.
- Q-232 Screw, Assembler Slide Brake.
- Q-233 Lock Washer, Assembler Brake.
- Q-234 Pin, Assembler Slide Brake Dowel.
- Q-240 Roller, Assembling Slide Anti-Friction.
- Q-241 Stud, Assembling Slide Anti-Friction Roller.
- Q-269 Screw, Assembler Slide Bar Link.
- Q-529 Block, Delivery Slide Short Finger, Small Star Wheel.
- Q-530 Block, Delivery Slide Short Finger, Large Star Wheel.
- Q-531 Block, Delivery Slide Short Finger, Intertype.
- Q-532 Finger, Delivery Slide Short, Small Star Wheel.
- Q-533 Finger, Delivery Slide Short, Large Star Wheel.
- Q-534 Finger, Delivery Slide Short, Intertype.
- Q-536 Screw, Delivery Slide Short Finger. (8-32 x 9/16 Rd. Hd.)
- Q-537 Pin, Delivery Slide Releasing.
- Q-538 Screw, Delivery Slide Rack Bar. (6-32 x 3/8" Long ACS)
- Q-539 Rack Bar, Delivery Slide.
- Q-540 Screw, Delivery Slide Head. (10-32 x 3/8" Fil. Hd.)
- Q-541 Bar, Delivery Slide, Assembled, Linotype.
- Q-542 Bar, Delivery Slide, Assembled, Intertype.
- Q-543 Clamp, Delivery Slide, Assembled.
- Q-544 Head, Delivery Slide.
- Q-545 Dowel, Delivery Slide Head.
- Q-547 Block, Delivery Slide Long Finger, Assembled.
- Q-552 Screw, Delivery Slide Rack Bar Pawl.
- Q-553 Spacer, Delivery Slide Rack Bar Pawl.
- Q-554 Plate, Delivery Slide Operating Finger Rack Bar Pawl.
- Q-555 Screw, Delivery Slide Operating Finger Rack Bar Pawl Plate.
- Q-558 Spring, Delivery Slide Rack Bar Pawl.
- Q-560 Delivery Slide Rod.
- Q-564 Finger, Delivery Slide Long, Assembled. (For Offset with Small Star Wheel)
- Q-565 Finger, Delivery Slide Long, Assembled. (For Large & Medium Star Wheel)
- Q-566 Spring, Delivery Slide Long Finger Flat.
- Q-574 Screw, Rack Bar Pawl Operating Finger. (6-32 x 1/4" ACS)
- Q-589 Assembling Elevator Gate Assembled, Linotype, Low Gate, Small Star, Uncovered Pawl.
- Q-590 Assembling Elevator Gate Assembled, Linotype, Low Gate, Large Star, Covered Pawl.
- Q-591 Assembling Elevator Gate Assembled, Linotype, Low Gate, Small Star, Covered Pawl.
- Q-593 Assembling Elevator Gate Assembled, Linotype, High Gate, Large Star, Covered Pawl.
- Q-594 Assembling Elevator Gate Assembled, Linotype, High Gate, Small Star, Covered Pawl.
- Q-595 Assembling Elevator Gate Assembled, Linotype, High Gate, Medium Star, Covered Pawl.
- Q-611 Assembling Elevator Gate Pawl.
- Q-616 Assembling Elevator Gate Pawl, Covered for Large Star Wheel.
- Q-620 Assembling Elevator Gate Pawl.
- Q-621 Covered Pawl (For Small Star Wheel)
- Q-632 Bar, Assembling Elevator Releasing.
- Q-633 Screw, Assembling Elevator Releasing Bar. (8-32 x 3/8" Shoulder Screw)
- Q-634 Roller, Assembling Elevator Gate Spring.
- Q-738 Bar, Pawl Rack.
- Q-790 Bar, Assembling Slide.
- Q-938 Delivery Slide, Assembled.
- Q-939 Delivery Slide, Assembled, Linotype.
- Q-940 Delivery Slide, Assembled, Late Linotype.
- Q-944 Screw, Short Finger Short. (8-32 x 7/16" Long ACS)
- Q-945 Assembling Elevator Gate, Assembled. (D-2821-AF)
- Q-946 Assembling Elevator Gate, Assembled. (D-2821-AALF)
- Q-947 Assembling Elevator Gate, Assembled. (D-2821-AASF)
- Q-948 Assembling Elevator Gate, Assembled. (D-2821-AF)
- Q-949 Assembling Elevator Gate, Assembled. (D-5525-AF)
- Q-951 Assembling Elevator Gate, Assembled. (D-5524-AMF)
- Q-953 Finger, Rack Bar Pawl Operating.
- Q-954 Pin, Rack Bar Pawl Operating Finger.
- Q-1430 Screw, Long Finger Spring. (4-48 x 3/16" Flat Hd.)
- Q-1571 Finger, Delivery Slide, Long.
- Q-1590 Wrench, Open End.

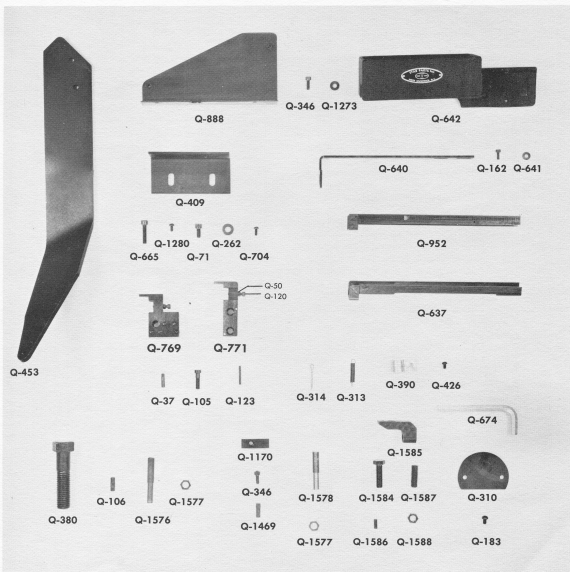


Q-37 Dowel, Rack Jaw Support, Linotype.
 Q-50 Nut, Assembly Elevator Releasing Bar Screw.
 Q-71 Screw, Memory Transfer Microswitch Housing Cover Bracket, Teletypesetter.(1/4-20 x 1/2" ACS)
 Q-105 Screw, Left Hand Vise Jaw Holding, (1/4-24 x 7/8" Fil. Hd.)
 Q-106 Dowel, Vise Jaw.
 Q-120 Screw, Right Hand Vise Jaw Adjusting, (8-32 x 3/4" ACS)
 Q-123 Pin, Back Jaw Support Dowel, Intertype.
 Q-162 Screw, Line Stop
 Q-183 Screw, Assembler Rod Support, (10-32 x 5/16" Rd. Hd.)
 Q-262 Washer, Selector Box Assembly Bracket Screw.
 Q-310 Cover, Intertype Quadder.
 Q-313 Spring, Pump Stop Lever.
 Q-314 Cotter Pin
 Q-346 Screw, Line Stop Shifter Guard. (10-32 x 1/2" ACS)
 Q-380 Screw, Bracket Fastening.
 Q-390 Clamp, Safety Switch Box.
 Q-409 Bracket, Memory Transfer Microswitch Housing Cover, Teletypesetter.
 Q-426 Microswitch Actuator
 Q-453 Holding Bracket, Selector Box Assembly, Teletypesetter.
 Q-637 Line Stop, Intertype.
 Q-640 Line Stop Shifter.
 Q-641 Washer, Line Stop Shifter Fastening Screw.
 Q-642 Guard, Line Stop Shifter, Assembled.
 Q-665 Screw, Selector Box Assembly Holding Bracket, Teletypesetter. (1/4-20 x 1" ACS)
 Q-674 Set of Allen Wrenches (8)
 Q-704 Keyboard Rod
 Q-769 Support, First Elevator Jaw Back, Linotype.
 Q-771 Support, First Elevator Jaw Back, Intertype.
 Q-888 Holding Bracket, Selector Box Assembly, Teletypesetter.
 Q-952 Line Stop, Linotype.
 Q-1170 Filler Piece, Vise Cap.
 Q-1273 Washer, Line Stop Shifter Guard Screw.
 Q-1280 Screw, Memory Transfer Microswitch Housing Cover.
 Q-1469 Dowel, Actuating Slide Guide.
 Q-1576 Screw, Right Hand Knife Adjusting, Linotype.
 Q-1577 Adjusting Nut, Filler Piece Vise Cap.
 Q-1578 Screw, Right Hand Knife Adjusting, Intertype.
 Q-1584 Screw, Delivery Slide Stop.
 Q-1585 Delivery Slide Stop.
 Q-1586 Dowel, Delivery Slide Stop.
 Q-1587 Screw, Delivery Slide Stop & Adjusting.
 Q-1588 Nut, Delivery Slide Stop Adjusting Screw.

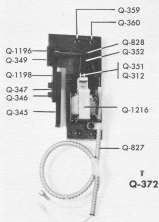


Q-823




Q-372

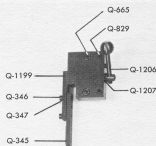


Q-825

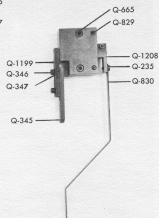


Q-826



**Q-283
Q-286**




**Q-284
Q-287**

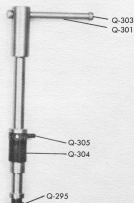


**Q-285
Q-288**

- Q-235 Screw, Justification Stop Fulcrum Arm Extension.
- Q-283 Screw, Vise Locking, Left Hand, Assembled, Linotype.
- Q-284 Screw, Vise Locking, Right Hand, Assembled, Linotype.
- Q-285 Screw, Vise Locking, Right Hand, Assembled, Linotype.(For Mohr Saw).
- Q-286 Screw, Vise Locking, Left Hand, Assembled, Intertype.
- Q-287 Screw, Vise Locking, Right Hand, Assembled, Intertype.
- Q-288 Screw, Vise Locking, Right Hand, Assembled, Intertype.(For Mohr Saw).
- Q-295 Replaceable End, Vise Locking Screw.
- Q-301 Handle, Vise Locking Screw, Assembled.
- Q-303 Screw, Vise Locking Screw Handle.
- Q-304 Adjusting Sleeve, Vise Locking Screw.
- Q-305 Safety Stud, Vise Locking Screw.
- Q-312 Cotter Hair-Pin (HPC146)
- Q-345 Stop, Justification Unit Lower.
- Q-346 Screw, Justification Pawl Clamping. (10-32 x 1/2 ACS)
- Q-347 Washer, Justification Pawl Clamping Screw. (#10 Medium)
- Q-349 Stud, Justification Stop Spring.
- Q-351 Pin, Solenoid Armature Fastening.
- Q-352 Spring, Solenoid Armature Return.
- Q-359 Screw, Justification Unit Fastening. (1/4-20 x 3/4 ACS)
- Q-360 Screw, Justification Unit Leveling. (1/4-20 x 1/4 Socket Set)
- Q-372 Screw, Justification Unit Guard. (6-32 x 1/4 Rd. Hd.)
- Q-665 Screw, Justification Unit Cover Fastening. (1/4-20 x 1" ACS)
- Q-823 Justification Unit Assembled.(Deluxe)
- Q-825 Justification Stop Block, Assembled.
- Q-826 Justification Unit Assembled. (H Model Only)
- Q-827 Justification Cable, Assembled.
- Q-828 Screw, Solenoid Armature Fastening Spring. (4-48 x 13/16 Rd. Hd.)
- Q-829 Screw, Justification Unit Leveling. (1/4-20 x 3/4 Long Cup Point Allen Set)
- Q-830 Link, Justification Stop Connecting.
- Q-1196 Base, Justification Unit.
- Q-1198 Stop, Justification Unit Upper.
- Q-1199 Justification Stop, Upper, Assembled.
- Q-1203 Guard, Justification Unit. (Deluxe)
- Q-1206 Handle, Justification Unit Operating.
- Q-1207 Spring, Justification Unit Operating Handle Tension.
- Q-1208 Extension, Justification Stop Fulcrum Arm.
- Q-1216 Solenoid, Justification Unit.


- Q-30 Spring, Relief Cam Actuating Arm.
- Q-73 Screw, Vise Jaw Adjusting, Left Hand.
- Q-80 Positioning Screw, Assembled. (Mohr Saw)
- Q-81 Positioning Screw Assembled.
- Q-97 Block, Left Hand Vise Jaw, Assembled.(Mohr Saw)
- Q-98 Block, Left Hand Vise Jaw, Assembled.
- Q-105 Screw, Left Hand Vise Jaw Holding. (1/4-24 x 7/8" Fil. Hd.)
- Q-107 Screw, Right Hand Vise Jaw Holding. (1/4-24 x 9/16" Fil. Hd.)
- Q-108 Right Hand Vise Jaw Assembled.
- Q-114 Vise Jaw, Right Hand.
- Q-119 Tube, Positioning Screw Driving.
- Q-124 Gear, Positioning Screw Bevel.
- Q-125 Dial Bracket, Assembled.
- Q-128 Screw, Dial Handle.
- Q-129 Dial Handle.
- Q-131 Dial
- Q-132 Dial Nut.
- Q-138 Dial Indicator.
- Q-142 Stud, Gear Plate Adjusting.
- Q-159 Stud, Gear Plate Fastening.
- Q-160 Nut, Gear Plate Fastening. (1/4-24 Special)
- Q-162 Screw, Line Stop Shifter. (8-32 x 3/8" ACS)
- Q-163 Screw, Push-Pull Cable Clamp. (8-32 x 1/2 ACS)
- Q-167 Tube, Positioning Screw Nut Guide.
- Q-278 Stud, Vise Locking, Right Hand, Linotype.
- Q-279 Stud, Vise Locking, Right Hand, Intertype.
- Q-281 Stud, Vise Locking, Left Hand, Intertype.
- Q-282 Stud, Vise Locking, Right Hand, Air Cooled, Intertype.
- Q-286 Screw, Vise Locking, Left Hand, Assembled, Intertype.
- Q-287 Screw, Vise Locking, Right Hand, Assembled, Intertype.
- Q-295 Replaceable End, Vise Locking Screw.
- Q-301 Handle, Vise Locking Screw, Assembled.
- Q-303 Screw, Vise Locking Screw Handle.
- Q-304 Sleeve, Vise Locking Screw Adjusting.
- Q-305 Safety Stud, Vise Locking Screw.
- Q-308 Supporting Rail, Vise Jaw Block, Left Hand.
- Q-346 Screw, Line Stop Shifter Guard. (10-32 x 1/2" ACS)
- Q-622 Assembling Elevator Gate Assembled, Intertype, Low Gate, Small Star, Uncovered Pawl.
- Q-623 Assembling Elevator Gate Assembled, Intertype, Low Gate, Small Star, Covered Pawl.
- Q-624 Assembling Elevator Gate Assembled, Intertype, Low Gate, Small Star, Covered Pawl, With Operating Cam.
- Q-637 Line Stop, Intertype.
- Q-640 Shifter, Line Stop.
- Q-641 Washer, Line Stop Shifter Fastening Screw.
- Q-642 Guard, Line Stop Shifter, Assembled.
- Q-736 Stud, Right Hand Vise Locking, Air Cooled. (Late Model Intertype)
- Q-737 Stud, Right Hand Vise Locking, Air Cooled. (Late Late Intertype)
- Q-777 Dial Bracket, Plunger Spring.
- Q-784 Gear Plate Assembled.
- Q-788 Nut, Positioning Screw.
- Q-791 Stud, Left Hand Vise Locking.
- Q-888 Holding Bracket, Selector Box Assembly, Teletypesetter.
- Q-1057 Left Hand Vise Jaw Horizontal Rack.
- Q-1060 Guide and Brace Assembled.
- Q-1084 Right Hand Vise Jaw Horizontal Rack.
- Q-1131 Gear Plate.
- Q-1273 Washer, Line Stop Shifter Guard Screw.

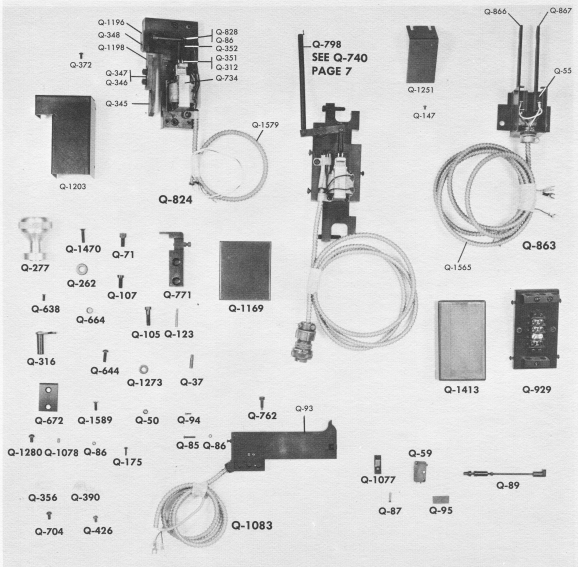


- Q-37 Dowel, Rack Jaw Support, Linotype.
- Q-50 Nut, Assembling Elevator Releasing Bar Screw.
- Q-55 Microswitch (V3-715)
- Q-59 Vise Jaw Microswitch.
- Q-71 Screw, Control Box Fastening.
- Q-85 Screw, Microswitch Adjusting. (4-48 x 9/16 Rd. Hd.)
- Q-86 Nut, Operating Lever Adjusting. (4-48 Hex.)
- Q-87 Screw, Microswitch and Operating Lever Fulcrum.
- Q-89 Rod, Switch Operating, Assembled.
- Q-93 Left Hand Vise Jaw, Intertype.
- Q-94 Screw, Vise Jaw Cable Fitting. (3-56 x 9/32" Fil. Hd.)
- Q-95 Insulation, Vise Jaw Microswitch.
- Q-105 Screw, Left Hand Vise Jaw Holding. (1/4-24 x 7/8" Fil. Hd.)
- Q-107 Screw, Right Hand Vise Jaw Holding. (1/4-24 x 9/16" Fil. Hd.)
- Q-123 Dowel, Back Jaw Support. Intertype.
- Q-147 Screw, Actuating Switch Housing Cover. (4-48 x 3/16" Rd. Hd.)
- Q-175 Screw, Assembler Stop Attaching. (4-48 x 11/32" Fil. Hd.)
- Q-262 Washer, Locating Plate Holding Screw.
- Q-277 Extension Handle.
- Q-312 Pin, Solenoid Armature Fastening.
- Q-316 Hinge Pin, Justification Bar, Intertype.
- Q-345 Justification Stop, Lower.
- Q-346 Screw, Justification Stop Clamping. (10-32 x 1/2" ACS)
- Q-347 Washer, Justification Stop Clamping Screw. (#10 Medium)
- Q-348 Screw, Justification Stop Pivot.
- Q-351 Pin, Solenoid Armature Fastening.
- Q-352 Spring, Solenoid Armature Return.
- Q-356 Nylon, Clamp, Small.
- Q-372 Screw, Justification Unit Guard. (6-32 X 1/4" Rd. Hd.)
- Q-390 Clamp, Safety Switch Box.
- Q-426 Microswitch Actuator.
- Q-638 Screw, Line Stop. (8-32 x 3/8" Ft. Hd.)
- Q-644 Screw, Line Stop Shifter Guard. (10-32 x 9/16" Rd. Hd.)
- Q-664 Bushing, Holding Screw.
- Q-672 Shoe, Pot Pump Extension.
- Q-704 Keyboard Rod.
- Q-734 Solenoid, Justification Unit.
- Q-762 Screw, Jaw Microswitch Operating Rod Stop. (Special)
- Q-771 Support, First Elevator Jaw, Back.
- Q-798 Actuating Spring (See Q-740 - Page 7)
- Q-824 Justification Unit, Assembled. (Deluxe)
- Q-828 Screw, Operating Lever Adjusting. (4-48 x 13/16" Rd. Hd.)
- Q-863 Solenoid Actuating Unit, Assembled.
- Q-866 Lever and Bearing, Microswitch Actuating, Left Hand, Assembled.
- Q-867 Lever and Bearing, Microswitch Actuating, Right Hand, Assembled.
- Q-929 Bracket, Recast Terminal.
- Q-1077 Switch, Operating Lever, Assembled.
- Q-1078 Screw, Switch Adjusting Lock, (8-32 x 1/4" Allen Set) (Used on Serial Nos. E-400 to E-427 Only.)
- Q-1083 Vise Jaw, Assembled. (Deluxe)
- Q-1169 Cover, Solenoid Bracket Pump Stop.
- Q-1196 Base, Justification Unit.
- Q-1198 Stop, Justification Unit Upper. (Deluxe)
- Q-1203 Guard, Justification Unit. (Deluxe)
- Q-1251 Cover, Actuating Switch Housing.
- Q-1273 Washer, Assembly Microswitch Housing Fastening.
- Q-1280 Screw, Selector Box Fastening.
- Q-1413 Cover, Recast Terminal Bracket.
- Q-1470 Screw, Plate Fastening. (10-32 x 1/4" Allen Ft. Hd.)
- Q-1565 Cable, Assembled for Solenoid Actuating Unit.
- Q-1579 Cable, Assembled with Wires for Justification Unit. (Deluxe)
- Q-1589 Screw, Pot Pump Extension.

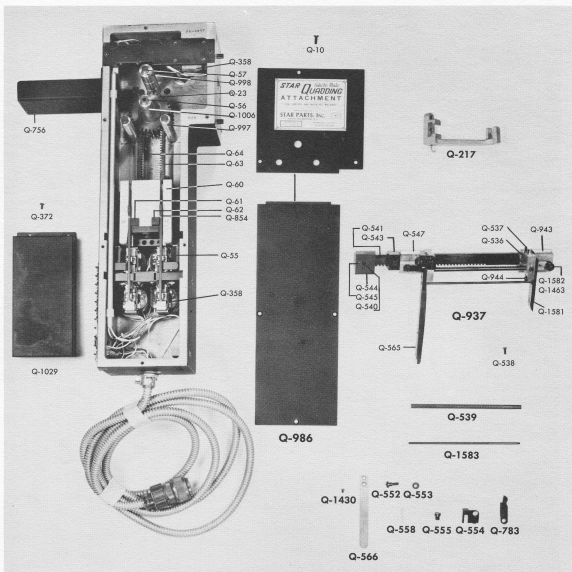


Q-10 Screw, Cover Fastening. (8-32 x 7/16" Oval Hd.)
 Q-23 Operating Gear, Assembled.
 Q-55 Microswitch (U3-715)
 Q-56 Cotter, Operating Gear Retaining Bushing Retaining.
 Q-57 Cotter, Idler Bushing Retaining.
 Q-60 Sliding Unit, Assembled.
 Q-61 Pawl, Left Hand Rack Actuating, Assembled.
 Q-62 Pawl, Right Hand Rack Actuating, Assembled.
 Q-63 Right Hand Vertical Rack, Assembled.
 Q-64 Left Hand Vertical Rack, Assembled.
 Q-217 Support, Right Hand Assembly Rod. (For Comet)
 Q-358 Solenoid.
 Q-372 Screw, Terminal Block Cover. (6-32 x 1/4" Rd. Hd.)
 Q-536 Screw, Delivery Slide Short Finger. (8-32 x 9/16" Rd. Hd.)
 Q-537 Pin, Delivery Slide Releasing.
 Q-538 Screw, Rack Bar Fastening. (6-32 x 3/8" long Allen Ft. Hd.)
 Q-539 Rack, Delivery Slide Bar.
 Q-540 Screw, Delivery Slide Head. (10-32 x 3/8" Fil. Hd.)
 Q-541 Delivery Slide Bar, Assembled, Linotype.
 Q-543 Clamp, Delivery Slide. Assembled.
 Q-544 Head, Delivery Slide.
 Q-545 Dowel, Delivery Slide Head.
 Q-547 Finger Block, Delivery Slide Long, Assembled.
 Q-552 Screw, Delivery Slide Rack Bar Pawl.
 Q-553 Spacer, Delivery Slide Rack Bar Pawl.
 Q-554 Plate, Delivery Slide Operating Finger Rack Bar Pawl.
 Q-555 Screw, Delivery Slide Operating Finger Rack Bar Pawl Plate.
 Q-558 Spring, Delivery Slide Rack Bar Pawl.
 Q-565 Delivery Slide Long Finger, Assembled. (Large and Medium Star Wheel)
 Q-566 Spring, Delivery Slide Long Finger Flat.
 Q-756 Guard, Vise Jaw Horizontal Racks.
 Q-783 Gear Plate, Assembled.
 Q-854 Lever, Right Hand Operating, Assembled.
 Q-937 Slide, No-Set Delivery. (Comet and Late Style Machines with Faceplate that Open.)
 Q-943 Short Finger Block
 Q-944 Screw, Delivery Slide Short Finger. (8-32 x 7/16" ACS)
 Q-986 Cover-Model F.
 Q-997 Bushing, Vertical Rack Idler.
 Q-998 Bushing, Horizontal Rack Idler.
 Q-1006 Bushing Gear Retaining.
 Q-1029 Cover, Terminal Block.
 Q-1430 Screw, Long Finger Spring. (4-48 x 3/16" Ft. Hd.)
 Q-1463 Washer, Releasing Screw Spring.
 Q-1581 Short Finger (Comet)
 Q-1582 Screw, Elevator Releasing.
 Q-1583 Slide Rod.

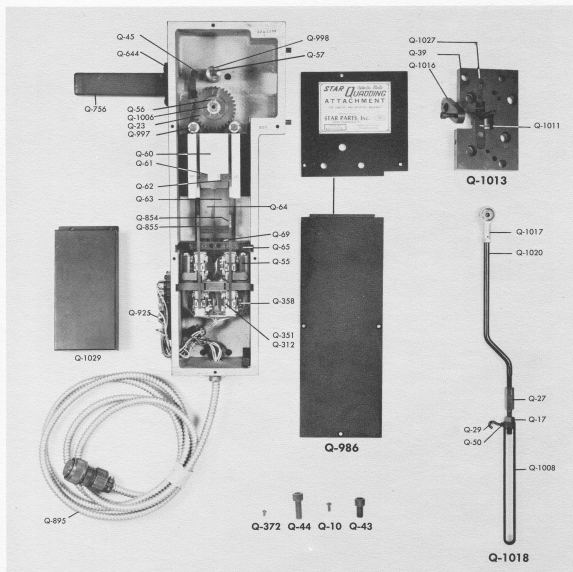

Q-10 Screw, Cover Fastening. (8-32 x 7/16" Oval Hd.)
 Q-17 Nut, Relief Cam Adjusting Screw.
 Q-23 Operating Gear, Assembled.
 Q-27 Screw, Relief Cam Adjusting. (5/16-18 Special)
 Q-29 Hook, Spring Suspension.
 Q-39 Fastening Plate.
 Q-43 Screw, Fastening Plate. (3/8-16 x 5/8" ACS)
 Q-44 Screw, Housing Fastening. (3/8-16 x 1" ACS)
 Q-45 Guide, Left Hand Vise Jaw Horizontal Rack.
 Q-50 Nut, Assembling Elevator Releasing Bar Screw.
 Q-55 Microswitch (V3-715)
 Q-56 Cotter, Operating Gear Retaining Bushing Retaining.
 Q-57 Cotter, Idler Bushing Retaining.
 Q-60 Sliding Unit, Assembled.
 Q-61 Pawl, Left Hand Rack Actuating, Assembled.
 Q-62 Pawl, Right Hand Rack Actuating, Assembled.
 Q-63 Rack, Right Hand Vertical, Assembled.
 Q-64 Rack, Left Hand Vertical, Assembled.
 Q-65 Plate, Rack Stop, Assembled.
 Q-69 Spring, Rack Return.
 Q-312 Cotter Hair-Pin for Solenoid.
 Q-351 Spring Pin, Solenoid Holding.
 Q-358 Solenoid.
 Q-372 Screw, Terminal Block Guard. (6-32 x 1/4 Rd. Hd.)
 Q-644 Screw, Line Stop Shifter Guard. (10-32 x 9/16" Rd. Hd.)
 Q-756 Guard, Vise Jaw Horizontal Racks.
 Q-854 Lever, Right Hand Operating, Assembled.
 Q-855 Lever, Left Hand Operating, Assembled.
 Q-895 Main Housing Cable, Assembled.
 Q-925 Terminal Block for (Deluxe).
 Q-986 Cover - Model F.
 Q-997 Bushing, Vertical Rack Idler.
 Q-998 Bushing, Horizontal Rack Idler.
 Q-1006 Bushing, Gear Retaining.
 Q-1008 Relief Cam Yoke.
 Q-1011 Bracket Assembled with Positioning Screw.
 Q-1013 Fastening Plate, Assembled.
 Q-1016 Relief Cam Assembled.
 Q-1017 Swivel Joint
 Q-1018 Relief Cam Actuating Arm & Swivel Joint, Assembled.
 Q-1020 Rod, Relief Cam Actuating Arm.
 Q-1027 Stop, Positioning Screw Bracket.
 Q-1029 Cover, Terminal Block.

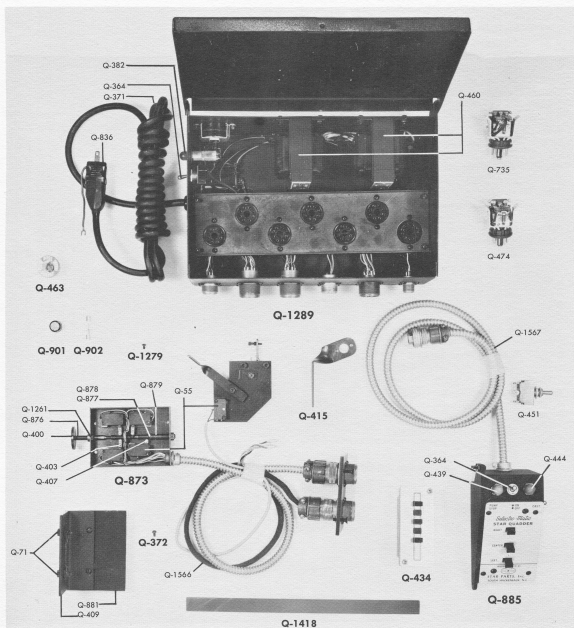


Q-55 Microswitch (V3-715)
 Q-71 Screw, Memory Transfer Microswitch Housing Cover. (1/4-20 x 1/2" ACS)
 Q-364 On-Off Toggle Switch.
 Q-371 Cord, Power Supply Cable.
 Q-372 Screw, Memory Transfer Cover. (6/32 x 1/4" Rd. Hd.)
 Q-382 On-Off Light Signal.
 Q-400 Plunger, Memory Transfer Actuating.
 Q-403 Actuator, JV-30
 Q-407 Microswitch Actuator.
 Q-409 Bracket, Memory Transfer Microswitch Housing Cover. (Teletypesetter)
 Q-415 Lever, Actuating Plunger Operating. (Teletypesetter)
 Q-434 Switch, Push Button.
 Q-439 Dome, Pot Pump Light, Green.
 Q-444 Dome, Cast Light, Red.
 Q-451 Switch, Selector Box, Teletypesetter and Manual.
 Q-460 Transformer, Master Control Box. (110V-24V)
 Q-463 Fuse, Master Control Box. (3.2 Amps)
 Q-474 Relay, Eight Terminal. (Interchangeable)
 Q-735 Relay, Teletypesetter.
 Q-836 Adaptor.
 Q-873 Memory Transfer, Assembled.
 Q-876 Plunger, Memory Transfer Unit.
 Q-877 C Washer, Memory Transfer Plunger.
 Q-878 Washer, Memory Transfer Plunger.
 Q-879 Spring, Memory Transfer Slide Stop.
 Q-881 Cover, Memory Transfer. (Teletypesetter)
 Q-885 Selector Box, Assembled. (Teletypesetter)
 Q-901 Fuse Holder.
 Q-902 Fuse.
 Q-1261 Bearing, Memory Transfer Plunger.
 Q-1279 Screw, Selector Box Name Plate Fastening. (6-32 x 1/4" Oval Hd.)
 Q-1289 Master Control Box Assembled. (Deluxe)
 Q-1418 Bracket, Master Control Box Fastening. (Deluxe)
 Q-1566 Cable, Assembled for Memory Transfer.
 Q-1567 Cable, Assembled for Selector Box.



Q-917





Q-1401



Q-914




Q-919

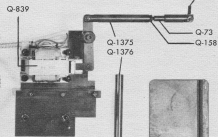

Q-903



Q-1370



Q-934



Q-906



Q-912
Q-911



Q-1387




Q-908



Q-704

Q-356

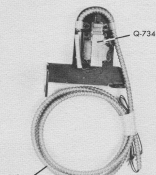

Q-909



Q-1392



Q-372



Q-910

Q-73 Screw, Vise Jaw Adjusting, Left Hand.
 Q-158 Nut, Transformer Fastening Screw. (10-32 Hex)
 Q-312 Cotter Hair-Pin (HPC146)
 Q-351 Pin, Solenoid Armature Fastening.
 Q-356 Nylon Clamp, Small.
 Q-372 Screw, Transfer Slide Stop Assembly Cover. (6-32 x 1/4" Rd. Hd.)
 Q-704 Keyboard Rod.
 Q-734 Solenoid, Transfer Stop Assembly.
 Q-839 Solenoid, Start-Stop Mechanism. (Special for Deluxe)
 Q-848 Microswitch.
 Q-850 Screw, Mold Turning Segment, Long. (Special)
 Q-852 Screw, Microswitch Operating Cam Fastening. (10-32 x 1/2" Ft. Hd.)
 Q-903 Start-Stop Mechanism, Assembled.
 Q-906 Gothic Rail Assembly. (Deluxe)
 Q-908 Shifter Stud. (Converted from D-193)
 Q-909 Transfer Slide Stop, Assembly.
 Q-910 Pawl, Line Stop Returning.
 Q-911 Switch, Delivery Slide, Assembled. (Deluxe)
 Q-912 Switch, Delivery Slide, Assembled. (Deluxe)
 Q-914 Cam Switch Assembled.
 Q-915 Cable, Transfer Slide Stop Assembly, Assembled.
 Q-917 Memory Transfer Cable.
 Q-919 Teletype Cable. (Deluxe)
 Q-930 Cable Assembled for Gothic Rail Assembly. (Deluxe)
 Q-931 Start-Stop Cable, Assembled. (Deluxe)
 Q-934 Bracket, Delivery Slide Switch Actuating Lever Assembly. (Deluxe)
 Q-1224 Bracket, Cam Switch.
 Q-1370 Cover, Start-Stop Mechanism.
 Q-1375 Actuating Rod, Long.
 Q-1376 Actuating Rod, Long.
 Q-1382 Stud, Rod Swivel.
 Q-1387 Cover, Gothic Rail Assembly. (Deluxe)
 Q-1392 Cover, Transfer Slide Stop Assembly.
 Q-1397 Cam, Switch Operating.
 Q-1401 Recast Cable, Assembled.
 Q-1572 Cable, Assembled for Delivery Slide Switch. (Deluxe)
 Q-1573 Cable, Assembled for Cam Switch.
 Q-1580 Washer, Microswitch Bracket Fastening Screw.

INDEX OF PARTS

PART	PAGE	PART	PAGE	PART	PAGE	PART	PAGE
Q-10	2,28,30	Q-124	12,24	Q-221	18	Q-358	2,28,30
Q-17	16,30	Q-125	12,24	Q-222	18	Q-359	6,22
Q-23	2,4,28,30	Q-128	12,24	Q-223	18	Q-360	22
Q-27	16,30	Q-129	12,24	Q-227	18	Q-364	8,14,32
Q-29	16,30	Q-130	12	Q-229	18	Q-371	4,8,32
Q-30	16,24	Q-131	12,24	Q-232	18	Q-372	2,14,22,26 28,30,32,34
Q-37	20,26	Q-132	12,24	Q-233	18	Q-380	20
Q-39	30	Q-138	12,24	Q-234	18	Q-382	8,32
Q-43	16,30	Q-142	12,24	Q-235	22	Q-390	20,26
Q-44	6,16,30	Q-144	12	Q-240	18	Q-400	14,32
Q-45	2,30	Q-145	12	Q-241	18	Q-401	12
Q-50	12,16,18,20 26,30	Q-147	14,26	Q-262	20,26	Q-402	12
Q-55	2,14,26,28 30,32	Q-154	12	Q-269	18	Q-403	14,32
Q-56	2,4,28,30	Q-155	12	Q-272	10	Q-407	14,32
Q-57	2,4,28,30	Q-158	6,34	Q-273	10	Q-408	12
Q-59	16,26	Q-159	12,24	Q-274	10	Q-409	20,32
Q-60	2,4,28,30	Q-160	12,24	Q-275	10	Q-415	12,32
Q-61	2,4,28,30	Q-162	12,20,24	Q-276	10	Q-419	4
Q-62	2,4,28,30	Q-163	12,16,24	Q-277	16,26	Q-426	20,26
Q-63	4,28,30	Q-166	12	Q-278	16,24	Q-434	14,32
Q-64	4,28,30	Q-167	12,24	Q-279	16,24	Q-439	14,32
Q-65	2,4,30	Q-170	12	Q-281	16,24	Q-441	4
Q-68	4	Q-171	12	Q-282	16,24	Q-444	14,32
Q-69	2,30	Q-175	12,26	Q-283	22	Q-451	14,32
Q-71	20,26,32	Q-176	12	Q-284	22	Q-453	20
Q-73	16,24,34	Q-177	12	Q-285	22	Q-460	8,32
Q-80	16,24	Q-178	12	Q-286	22,24	Q-463	8,32
Q-81	16,24	Q-180	12	Q-287	22,24	Q-474	8,32
Q-85	16,26	Q-181	12	Q-288	22	Q-529	18
Q-86	4,16,26	Q-182	12	Q-295	22,24	Q-530	18
Q-87	16,26	Q-183	6,12,20	Q-301	22,24	Q-531	18
Q-89	16,26	Q-184	12	Q-303	22,24	Q-532	18
Q-93	26	Q-185	12	Q-304	22,24	Q-533	18
Q-94	16,26	Q-186	12	Q-305	22,24	Q-534	18
Q-95	16,26	Q-187	12	Q-308	16,24	Q-536	18,28
Q-97	16,24	Q-190	12	Q-310	20	Q-537	18,28
Q-98	16,24	Q-197	12	Q-312	2,22,26,30 34	Q-538	18,28
Q-101	16	Q-198	12	Q-313	20	Q-539	18,28
Q-105	16,20,24,26	Q-199	12	Q-314	20	Q-540	18,28
Q-106	20	Q-200	12	Q-316	16,26	Q-541	18,28
Q-107	16,24,26	Q-203	18	Q-345	22,26	Q-542	18
Q-108	16,24	Q-205	18	Q-346	20,22,24,26	Q-543	18,28
Q-110	16	Q-206	18	Q-347	22,26	Q-544	18,28
Q-111	16	Q-211	12	Q-348	26	Q-545	18,28
Q-114	16,24	Q-212	12	Q-349	22	Q-547	18,28
Q-119	12,24	Q-213	12	Q-351	2,22,26,30 34	Q-552	18,28
Q-120	20	Q-215	12	Q-352	22,26	Q-553	18,28
Q-123	20,26	Q-216	12	Q-356	26,34	Q-554	18,28
		Q-217	28			Q-555	18,28
		Q-218	18			Q-558	18,28
						Q-560	18

PART	PAGE	PART	PAGE	PART	PAGE	PART	PAGE
Q-564	18	Q-738	18	Q-855	2,4,30	Q-946	18
Q-565	18,28	Q-740	14	Q-859	4	Q-947	18
Q-566	18,28	Q-743	12	Q-862	14	Q-948	18
Q-574	18	Q-744	4	Q-863	26	Q-949	18
Q-576	10	Q-756	2,4,28,30	Q-866	14,26	Q-951	18
Q-577	10	Q-762	16,26	Q-867	14,26	Q-952	20
Q-578	10	Q-767	16	Q-871	14	Q-953	18
Q-579	10	Q-768	16	Q-873	32	Q-954	18
Q-589	18	Q-769	20	Q-874	14	Q-972	6
Q-590	18	Q-771	20,26	Q-875	14	Q-975	6
Q-591	18	Q-776	12	Q-876	14,32	Q-986	2,28,30
Q-593	18	Q-777	12,24	Q-877	14,32	Q-997	2,4,28,30
Q-594	18	Q-778	12	Q-878	14,32	Q-998	2,4,24,28
Q-595	18	Q-781	12	Q-879	14,32		30
Q-611	18	Q-782	12	Q-881	32	Q-1006	2,4,28,30
Q-616	18	Q-783	28	Q-882	14	Q-1008	16,30
Q-620	18	Q-784	24	Q-883	14	Q-1011	16,30
Q-621	18	Q-788	12,24	Q-885	32	Q-1013	16,30
Q-622	24	Q-789	12,26	Q-888	20,24	Q-1014	16
Q-623	24	Q-790	18	Q-889	8	Q-1016	16,30
Q-624	24	Q-791	16,24	Q-890	4	Q-1017	16,30
Q-632	18	Q-796	14	Q-891	8	Q-1018	16,30
Q-633	18	Q-798	26	Q-895	30	Q-1019	16
Q-634	18	Q-799	14	Q-896	14	Q-1020	16,20
Q-637	20,24	Q-800	14	Q-898	16	Q-1021	16
Q-638	26	Q-802	14	Q-899	8	Q-1027	16,30
Q-640	20,24	Q-806	4	Q-901	32	Q-1029	2,28,30
Q-641	6,20,24	Q-807	4	Q-902	32	Q-1031	4
Q-642	20,24	Q-808	4	Q-903	34	Q-1057	16,24
Q-644	2,4,26,30	Q-809	4	Q-906	34	Q-1060	16,24
Q-664	16,26	Q-811	4	Q-908	34	Q-1077	16,26
Q-665	20,22	Q-812	4	Q-909	34	Q-1078	26
Q-672	26	Q-817	12	Q-910	34	Q-1083	26
Q-677	20	Q-819	4	Q-911	34	Q-1084	16,24
Q-687	6	Q-823	22	Q-912	34	Q-1109	12
Q-689	6	Q-824	26	Q-914	34	Q-1112	12
Q-692	6	Q-825	22	Q-915	34	Q-1118	12
Q-695	10	Q-826	22	Q-917	34	Q-1119	12
Q-696	10	Q-827	22	Q-919	34	Q-1131	24
Q-697	10	Q-828	22,26	Q-925	30	Q-1135	12
Q-698	6	Q-829	22	Q-927	4	Q-1147	12
Q-699	6	Q-830	22	Q-929	26	Q-1149	12
Q-700	6	Q-831	4	Q-930	34	Q-1150	12
Q-704	20,26,34	Q-832	4	Q-931	34	Q-1169	14,26
Q-705	6	Q-833	4	Q-934	34	Q-1170	20
Q-722	6	Q-834	4	Q-937	28	Q-1172	4
Q-723	6	Q-836	4,8,32	Q-938	18	Q-1173	4
Q-733	6	Q-839	34	Q-939	18	Q-1174	4
Q-734	26,34	Q-848	34	Q-940	18	Q-1175	4
Q-735	8,32	Q-850	34	Q-943	28	Q-1181	4
Q-736	16,24	Q-852	34	Q-944	18,28	Q-1182	4
Q-737	16,24	Q-854	2,4,28,30	Q-945	18		

PART	PAGE
Q-1183	4
Q-1184	4
Q-1185	4
Q-1187	4
Q-1196	22,26
Q-1198	22,26
Q-1199	22
Q-1203	22,26
Q-1206	22
Q-1207	22
Q-1208	22
Q-1209	4
Q-1210	4
Q-1216	22
Q-1224	34
Q-1228	4
Q-1251	14,26
Q-1261	14,32

PART	PAGE
Q-1273	6,20,24,26
Q-1275	4
Q-1279	32
Q-1280	20,26
Q-1289	32
Q-1294	8
Q-1320	10
Q-1370	34
Q-1375	34
Q-1376	34
Q-1382	34
Q-1387	34
Q-1392	34
Q-1397	34
Q-1401	34
Q-1413	26
Q-1418	32
Q-1430	18,28

PART	PAGE
Q-1463	28
Q-1469	20
Q-1470	26
Q-1512	6
Q-1515	6
Q-1520	6
Q-1521	6
Q-1522	6
Q-1534	6
Q-1536	6
Q-1537	6
Q-1539	6
Q-1542	6
Q-1546	6
Q-1565	14,26
Q-1566	14,32
Q-1567	14,32
Q-1570	14

PART	PAGE
Q-1571	18
Q-1572	34
Q-1573	34
Q-1576	20
Q-1577	20
Q-1578	20
Q-1579	26
Q-1580	34
Q-1581	28
Q-1582	28
Q-1583	28
Q-1584	20
Q-1585	20
Q-1586	20
Q-1587	20
Q-1588	20
Q-1589	26
Q-1590	18
Q-1591	4

NOTES

Made in U.S.A. by
BEAVERITE
DENVER COLORADO, U.S.A.

6008-50

